


Part No. 12666
Revised JAN 2003

Sno-King

BLUE PLASTIC CASED SNO-CONE INSTRUCTIONS

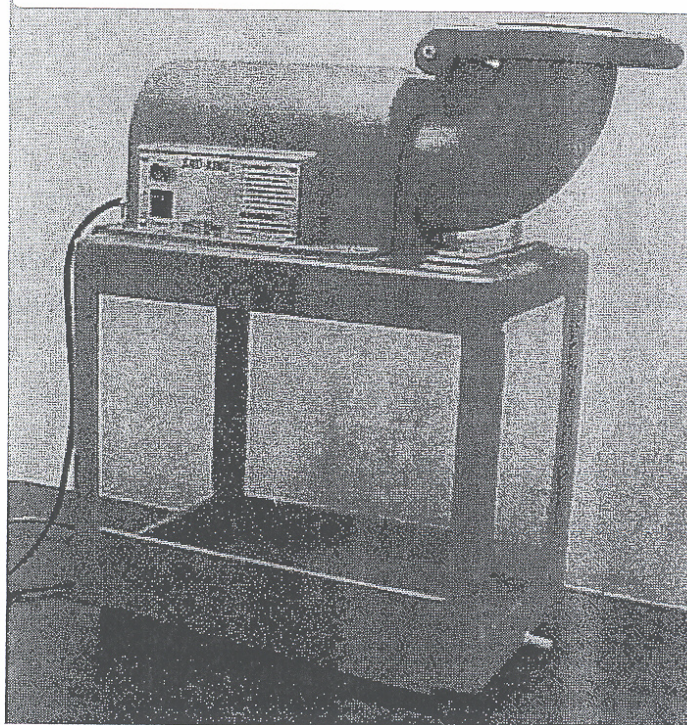

PARTY & EVENT RENTALS

35761 Curtis Blvd.
Eastlake, OH 44095
Phone: 440-942-4100
Fax: 440-942-6158

www.aladdinrents.com



GOLD MEDAL®

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 445241-4807 USA

INSTALLATION

MACHINE DESCRIPTION

The Sno-King is an automatic shaver with a tremendous capacity. You will find that it keeps up with any demand. The Sno-King consists of the hopper, which houses the cutter head, the pusher handle, the motor, and the display case.

ELECTRICAL REQUIREMENTS

The Sno-King operates on 120 Volt, 15 Amp, single phase, 60 cycle AC current. Be sure that your electrical supply meets this requirement.

ICE REQUIREMENTS

The Sno-King can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.

NOTE: The ice will not enter the shaving chute if the pieces are too large.

MACHINE OPERATION

Plug the power cord into the appropriate electrical outlet.

TO OPERATE THE SNO-KING

1. Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
2. Toggle the **POWER** switch to the **ON** position.
3. While pushing the **MOTOR** switch, apply downward pressure to the pusher handle. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

NOTE: Never allow any foreign or metallic objects around the shaver area of the Sno-King. Ice picks, scoops, and debris that may be in the ice often damage blades.